IN2100 (Series)

Quick Start

Guide de Démarrage Rapide Schnellstart-Anleitung Guía de Inicio Rápido Guida di Consultazione Rapida Snelstartgids Guia de Início Rápido Snabbstarthandbok Краткое руководство 빠른 시작 안내서 快速入门指南 Panduan Ringkas





Regulatory model V2000 and M2100 010-0734-02





Please read the safety instructions booklet before setting up the projector.

Unpack the box

Here's what's included:







Projector



Carry Case



USB Cable






Power Cable

Save the box and packing materials.



Put batteries in the remote

The remote uses 2 AA batteries.



Please dispose of batteries in an environmentally proper manner.

Buy a Full-Featured Remote and Other Custom Accessories

www.infocus.com/store

Status Indicator Panel

The top of your projector includes a convenient indicator panel with symbols that light up to show important status.

For details, see Troubleshooting.

Power/Standby



High Temperature


Replace Lamp



Connect source

Color-coded connections make it easy. You can connect more than one source if needed.

Connect to: Computer

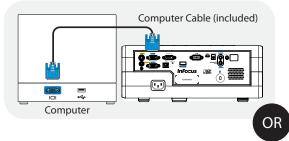


Got an Apple computer?

You may need an adapter. For more information, see How-To Guides at www.infocus.com/support/howto

Connect to: DVD, VCR

- 1 Connect video using a Composite Video cable or an S-Video cable www.infocus.com/store part no. SP-CPSTVID-5M or SP-SVIDEO-10M
- 2 Connect audio using a Mini Plug Audio Y-Cable Available from A/V dealer or retailer

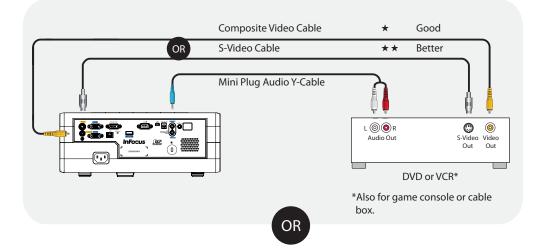


Connect to: Other kinds of sources

How-To Guides are available at www.infocus.com/support/howto



Turn on projector and source

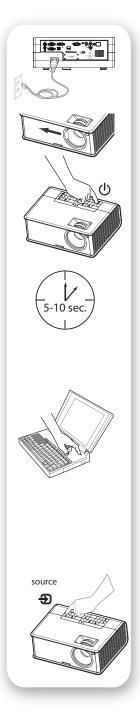

Connect the power cord to the projector and to an electrical outlet

The power light \bigcirc on the projector will light amber.

2 Slide open the lens cover

3 Turn on the projector

Touch the power light (or press power on the remote). The power light will start blinking green.

4 Wait for the lamp to warm up

After a few seconds, the power light will stop blinking and turn green. It can take a minute for the lamp to reach full brightness.



Warning: Do not look directly into the lens while the projector is being used.

5 Turn on computer or other source

You may need to press a specific key combination to activate your laptop's external video port. On most laptops, hold down the FN key while pressing a key labeled CRT/LCD, LCD/VGA, a monitor icon , or similar. Key combos for popular models:

Apple F7 Dell Fn+F8 Fujitsu Fn+F10

HP/Compaq Fn+F4 or Fn+F6 Sony F IBM ThinkPad Fn+F7 Toshib

Sony Fn+F7 Toshiba Fn+F5


Complete laptop activation chart at www.infocus.com/support



Important: If there is still no video, restart your computer (first make sure it's connected to the projector and the projector is turned on).

6 Change source if needed

If needed, press source (on the projector or remote) to view the source. You may have to press it more than once.




1 Height



- 1 Hold down the release button under the front of the projector.
- 2 Lift the front of the projector to the desired height.
- 3 Release the button.

2 Keystone



Press the keystone buttons to make the picture square.

3 Zoom and focus




Adjust zoom first, then focus the center of the image.

Need Help?



Press the Help button at any time to get help with connecting sources and improving the picture.

Projector Location

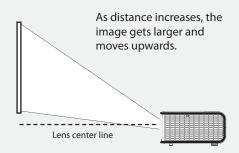

Diagonal	Distance to Screen			
Screen Size	Minimum	Maximum		
IN2112 and IN2114				
60" / 1.5m	6.48′ / 1.98m	7.80′/2.38m		
80" / 2m	8.64′ / 2.63m	10.40′/3.17m		
90" /2.286m	9.72′ / 2.96m	11.70′/3.57m		
150" / 3.8m	16.20' / 4.94m	19.50′ / 5.94m		
IN2116				
60" / 1.5m	6.21′/1.89m	7.74′ / 2.36m		
80" / 2m	8.34′ / 2.54m	10.36′/3.16m		
90" / 2.286m	9.40′ / 2.86m	11.68′/3.56m		
150" / 3.8m	15.77′/4.81m	19.55′/ 5.96m		

Interactive Screen Size and Distance Calculator www.infocus.com/calculator

Buy a Screen and Other Accessories www.infocus.com/store

Ceiling mount?

To flip the image, turn on the Ceiling Mount setting in the Setup menu.

menu E	^	
<	select ¢	>
	~	

Using the menus

- Press menu, then press 🔽 or 🔼 to review menus.
- 2 Press select to enter a menu, then press ∨ or ∧ to review settings.
- 3 Press select to change a setting. If this shows more choices, press ∨ or ∧ to update the setting, then press select or menu to save it.


4 Press menu to go back. Press it again to remove the menu. Note: Most picture settings are disabled (gray) unless a source is being displayed.

Controlling your presentations

Connect the USB cable between the projector and your computer (see step 3), then press \checkmark and \land to move through your presentation slides.

Note: Most picture settings are disabled (gray) unless a source is being displayed.

Use LitePort Source (IN2114 and IN2116 only)



View photos from a USB flash drive

Copy JPEG pictures to a USB flash drive, then plug the drive into the projector's LitePort connector. The slideshow starts automatically. Press arrow keys to change slides, press select to see thumbnails and change folders, press select again to return to the slideshow.



Turn off the projector

Press the power button

The power light on the projector will blink while the fan cools the lamp. If you need to unplug the projector, wait until the fan stops and the power light stops blinking and stays on.

Note: While the power light is blinking, button presses on the projector and remote are ignored.

(READ THE REFERENCE GUIDE)

Download it at www.infocus.com/support

The Reference Guide is available in multiple languages. It covers advanced setup and operation, including instructions for LAN/network functions (IN2114 & IN2116 only) and lamp replacement.

(TROUBLESHOOTING)

If there is no picture or the picture is blank



If the power light is off, make sure the power cord is connected and plugged into a live electrical outlet. If the power light is amber and not blinking, touch the power light (or press power on the remote).

Check video source and cables. Make sure the video source (computer, DVD player, VCR, etc.) is turned on and cables are securely connected between the source and the projector.

If your computer is connected using DisplayLink (not VGA), please see the DisplayLink Manager User's Guide for more troubleshooting information.

Make sure your computer's video port is enabled. Press the key combination that activates your laptop's external video port (see step 4). If there is still no image, restart your laptop.



 (\mathbf{c})

Press the Source button. You may need to press it several times to view the correct source.

Press the Auto Image button.

If "Signal out of range" is shown, or the picture looks bad



Press the Auto Image button. If that doesn't help (and the source is a computer), reduce your computer's display resolution or vertical refresh rate.

If the replace lamp light is on



Turn the projector off and wait at least one minute, then turn it on again. If the replace lamp light turns on again, the lamp needs to be replaced. For lamp replacement instructions, see the Reference Guide, which can be downloaded at

www.infocus.com/support

Only InFocus genuine lamps are tested for use in this projector.

If the high temperature light is on



Turn the projector off and remove anything that may be blocking the air vents on its side. Leave the projector off for at least one minute to let it cool before turning it on again. Important: Continuous operation at high temperature may reduce the lifetime of the lamp and/or projector.

If the service required light is on



Turn the projector off and wait at least one minute, then turn it on again. If the service required light turns on again, the projector needs to be serviced. See below for service contact information.

More troubleshooting options are in the Reference Guide



Download it at www.infocus.com/support

Warning: In the unlikely event of a lamp rupture, particles may be ejected from the projector. Keep out of the area under and around the projector while the projector is in use. See the safety instructions booklet for more details.

Questions? We're here to help!

Visit us at: www.infocus.com/support

We're here to support you with your new purchase. We can help you with...

- Determining screen sizes
- Documentation in other languages
- Connecting your sources (TV, DVD, Cable/Satellite, Game, etc.)
- Selecting optional accessories
- Product warranty protection plans

USA, Canada, Latin America	Asia Pacific	Europe, Middle East, Africa
Customer Support Telephone	Customer Support Telephone	Customer Support Telephone
+1 (503) 207-4700	Singapore: 65-6603-9871	France: 0800 905-993
TOLL FREE: 877-388-8360	China: 800-888-9288	Germany: 0800 181-3649
Mon-Fri, 6 am – 5 pm Pacific	Australia: 1300-290-922	Italy: 0800 877-238
	Australia Direct Sales: 61430-223-138	Spain: 900 993-163
	New Zealand: 008000-4636287	UK: 0800 028-6470
	Mon-Fri, 9 am - 5 pm SGT	Other: 008000 463-6287
	ap.support@infocus.com	Mon-Fri, 08:00 - 17:00 CET
		emea.support@infocus.com

Hg - Lamp contains mercury. Manage in accordance with local disposal laws. See www.lamprecycle.org

Declaration of Conformity

Manufacturer: InFocus Corporation, 13190 SW 68th Parkway, Suite 200, Portland, Oregon 97223-8368 USA We declare under our sole responsibility that this projector conforms to the following directives and norms: EuP Directive: 2005/32/ EC, EMC Directive 2004/108/EC, EMC: EN 55022, EN 55024, EN 61000-3-2, EN 61000-3-3, Low Voltage Directive 2006/95/EC, Safety: IEC 60950-1:2005(MOD).

Trademarks

Apple, Macintosh, and PowerBook are trademarks or registered trademarks of Apple Computer, Inc. IBM is a trademark or registered trademark of International Business Machines, Inc. Microsoft, PowerPoint, and Windows are trademarks or registered trademarks of Microsoft Corporation. Adobe and Acrobat are trademarks or registered trademarks of Adobe Systems Incorporated. DLP® and the DLP logo are registered trademarks of Texas Instruments and BrilliantColor™ is a trademark of Texas Instruments. In Focus, In Focus (stylized) are either registered trademarks of InFocus Corporation in the United States and other countries.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to this equipment that are not expressly approved by InFocus Corp. may void the user's authority to operate the equipment.

Canada

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Agency Approvals

cMETus. Other specific Country Approvals may apply. Please see product certification label.

Input ratings: 100-240Vac, 2.5A, 50-60Hz

InFocus reserves the right to alter product offerings and specifications at any time without notice.